

展开尺寸：420x100mm

unfold size: 420*100mm

折好尺寸：100x70mm 折5次

folded size: 100*70mm

材质：105g双铜纸

105 g double copper paper

iGear Item Code:IG 1929



Power Bank

USER MANUAL

This power bank is compatible with 5V input devices. Please read the user manual prior to use.



The power bank will automatically switch off if not used for longer than 30 seconds.

OPERATING INSTRUCTIONS

- 1 Power Switch : This button is used to turn on/off the power bank and to check the battery status.
- 2 Battery Indicator: This button is used to check the battery level .All four lights illuminated indicate a full battery.
- 3 Input: Use any Micro USB cable to charge the power bank.
Or Use any Type C-Type C cable or Type C USB cable to charge the power bank.
- 4 Output: This power bank is compatible with 5V input devices.
- 5 Use a Type C-Type C cable or a Type C-Lightning cable for Type C output function.

HOW TO CHARGE THE POWER BANK

- 1 Connect the power bank to a computer, laptop or power adaptor with a Micro USB cable or a Type C USB cable.
- 2 The battery level Indicator will be flashing when the power bank is charging.
- 3 When fully charged, the battery level indicator or light will stop flashing and remain on.



Notice: Improper use can activate the built-in circuit protection causing the power bank to shut down. To reset, simply recharge the power bank.

BATTERY INDICATOR

Battery Indicator	Battery Level
One Light	0% - 25%
Two Lights	25% - 50%
Three Lights	50% - 75%
Four Lights	75% - 100%

HOW TO USE THE POWER BANK

- 1 Ensure the output of the digital device you are charging is 5V.
- 2 Use a relevant USB charge cable to connect the power bank by USB port to your device.

Use a relevant Type C charge cable to connect the power bank by Type C port to your device.
- 3 Turn on the power bank, your device will commence charging.

NOTES

- 1 Ensure power bank is fully charged for first use.
- 2 To avoid damage to the power bank do not use any faulty or damaged cables to charge your device.
- 3 Do not drop, wet, misuse or attempt to disassemble the power bank.
- 4 Do not place this power bank near any heat source.
- 5 Do not put any foreign objects in the input/output port of the power bank, this could lead to a short circuit and damage.
- 6 Ensure the power bank is fully charged at least once every three months.

FAQ

- 1 Why is my power bank not working?
Check the following;
 - Is the USB cable functioning and connected?
 - Is the power bank turned on?
 - Is there enough battery left in the power bank?
 - Is the device compatible to the power bank (5V)?
- 2 Why is the power bank charging, stopping and restarting?
Because the charging current may be excessive and the over current protection function has been activated. To reset the power bank, simply recharge it.
- 3 Why is my power bank not charging my device?
This power bank is only compatible with 5V input devices, check the input on your device.
- 4 How can I use the Type C output function ?
Use a Type C - Type C cable or Type C - Lightning cable to charge your devices .